



Walkstool spare parts

## Instructions for replacing the red spring

1. To make it easier removing the old red spring, we advise you to cut off its two "heads" on both sides. This can be done using a wire cutter as seen on the picture.



2. Removing the red spring from the tube is best done using a medium/small screw driver. Push it towards the tube hole and fiddle until you can remove it completely.

### Insertion of red spring:

3. Make sure you insert the red spring into the tube in the correct direction.



4. Push it towards the spring hole with a screw driver, but be careful not to push it too far.



5. Use a screw driver to carefully move the red spring into position and make it snap out thru the spring holes on both sides.



Headoffice

SCANDINAVIAN TOUCH AB  
BJÖRKALLÉN 17, SE-142 66 TRÅNGSUND, SWEDEN  
PHONE +46 8 676 07 00  
www.walkstool.com






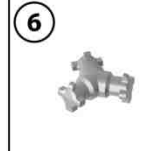
Production & Administration





SCANDINAVIAN TOUCH AB  
LINDHAGSGATAN 5C, SE-531 40 LIDKÖPING, SWEDEN  
PHONE +46 510 54 77 99  
E-MAIL info@walkstool.com



# Walkstool®

Comfort models

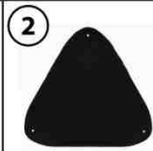
					
1	2	3	4	5	6
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

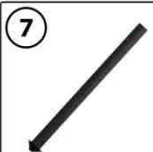
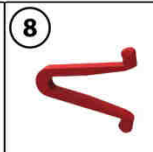
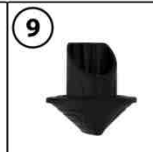
			
7	8	9	10
Lower leg	Red spring	Plastic end	Rubber foot



# Walkstool®

Basic models

					
1	2	3	4	5	6
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

		
7	8	9
Lower leg	Red spring	Plastic foot

