



## Instructions for replacing the seat

1. To remove the old seat, all three plastic studs need to be removed from the plastic cups. This can be done by using a knife and a hammer, as seen on the picture. Quite a lot of force is needed.



2. A small piece of the plastic stud will remain in the plastic cup. Remove this on all three plastic cups by using a hammer and a screw driver or center punch.



3. When attaching the new seat, use a rubber hammer to attach the plastic studs to the plastic cups. Verify that the plastic stud and seat is properly fixed by pulling the seat near each corner.
4. PLEASE NOTE! If you cannot fix the plastic stud to the plastic cup, the plastic cup is probably damaged and will need to be replaced. We then recommend replacing all remaining plastic cups. We have provided an extra plastic stud in case you waste one in this process.



Headoffice

SCANDINAVIAN TOUCH AB  
BJÖRKALLÉN 17, SE-142 66 TRÅNGSUND, SWEDEN  
PHONE +46 8 676 07 00  
www.walkstool.com







Production & Administration





SCANDINAVIAN TOUCH AB  
LINDHAGSGATAN 5C, SE-531 40 LIDKÖPING, SWEDEN  
PHONE +46 510 54 77 99  
E-MAIL info@walkstool.com



# Walkstool®

Comfort models

1	2	3	4	5	6
					
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece




7	8	9	10
			
Lower leg	Red spring	Plastic end	Rubber foot



# Walkstool®

Basic models

1	2	3	4	5	6
					
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

7	8	9
		
Lower leg	Red spring	Plastic foot

